

## SECTION 1B

# AIR CONDITIONING

**CAUTION:** This vehicle is equipped with Supplemental Inflatable Restraint (SIR). Refer to **CAUTIONS** in Section 9J under "ON-VEHICLE SERVICE" and the SIR Component and Wiring Location view in Section 9J before performing service on or around SIR components or wiring. Failure to follow **CAUTIONS** could result in possible air bag deployment, personal injury, or otherwise unneeded SIR system repairs.

**NOTICE:** Always use the correct fastener in the proper location. When you replace a fastener, use **ONLY** the exact part number for that application. General Motors will call out those fasteners that require a replacement after removal. General Motors will also call out the fasteners that require thread lockers or thread sealant. **UNLESS OTHERWISE SPECIFIED**, do not use supplemental coatings (paints, greases, or other corrosion inhibitors) on threaded fasteners or fastener joint interfaces. Generally, such coatings adversely affect the fastener torque and joint clamping force, and may damage the fastener. When you install fasteners, use the correct sequence and tightening specifications. Following these instructions can help you avoid damage to parts and systems.

## CONTENTS

General Information .....	1B-2	Refrigerant Recovery And Recycling, Adding Oil, Evacuating And Recharging Procedures .....	1B-15
General Description .....	1B-2	On-Vehicle Setup .....	1B-15
Air Distribution .....	1B-2	Compressor Drive Belt Inspection And Adjustment .....	1B-15
Refrigeration System .....	1B-2	Replacement Procedures .....	1B-16
Refrigerant-134a .....	1B-2	A/C Amplifier .....	1B-16
Compressor .....	1B-4	A/C Switch .....	1B-17
Compressor Clutch .....	1B-4	Air Ducts and Deflector Outlets .....	1B-17
Condenser .....	1B-4	Compressor .....	1B-17
Condenser Fan .....	1B-4	Compressor Clutch .....	1B-18
Expansion Valve .....	1B-4	Compressor Lower Mounting Bracket .....	1B-18
Evaporator .....	1B-4	Compressor Upper Mounting Bracket .....	1B-19
Receiver/Dryer .....	1B-5	Condenser .....	1B-19
Switches, Relays And Sensors .....	1B-5	Condenser Fan Relay and Compressor Clutch Relay .....	1B-20
A/C Amplifier .....	1B-5	Dual Pressure Switch .....	1B-20
A/C Control Switch .....	1B-5	Evaporator .....	1B-21
Condenser Fan Relay and Compressor Clutch Relay .....	1B-5	Evaporator Temperature Sensor (Thermistor) .....	1B-23
Dual Pressure Switch .....	1B-5	Expansion Valve .....	1B-24
Evaporator Temperature Sensor .....	1B-6	Receiver/Dryer .....	1B-25
Diagnosis .....	1B-6	Refrigerant Pipes and Hoses .....	1B-25
General Information .....	1B-6	Compressor-to-Compressor Pipe Hose (Compressor Discharge) .....	1B-25
Insufficient Cooling Check .....	1B-6	Compressor Hose-to-Condenser Pipe (Compressor Discharge) .....	1B-27
Refrigeration System Checks .....	1B-6	Condenser-to-Receiver/Dryer (Receiver/ Dryer Inlet) Pipe .....	1B-27
Leak Testing .....	1B-11	Evaporator-to-Compressor (Compressor Suction) Pipe .....	1B-28
Fluorescent Leak Detection .....	1B-11	Receiver/Dryer-to-Evaporator (Evaporator Inlet) Pipe .....	1B-28
Electronic (Halogen) Leak Detector .....	1B-12	Specifications .....	1B-29
Service Ports/Access Valves .....	1B-13	Fastener Torques .....	1B-29
Evaporator Core .....	1B-13	Special Tools .....	1B-30
Compressor .....	1B-13		
Electrical System Diagnosis .....	1B-13		
Blower Noise .....	1B-13		
On-Vehicle Service .....	1B-13		
Refrigeration System Services .....	1B-13		
Handling Refrigerant-134a .....	1B-13		
Maintaining Chemical Stability .....	1B-14		
Handling of Refrigerant Pipes/Hoses and Fittings .....	1B-14		
O-Ring Replacement .....	1B-15		































































