BODY ELECTRICAL SYSTEM

FUSES

The main fuse block is located on the fender apron panel in the engine room and junction/fuse block is installed to underside of instrument cover panel.
The designation and location of each fuse are shown below.

CAUTION:
- **When replacing a fuse, be sure to use one having a correct rated amperage.**
- **Before replacing a fuse, turn OFF every switch of electric equipments including ignition switch.**

MAIN FUSE BLOCK CIRCUIT

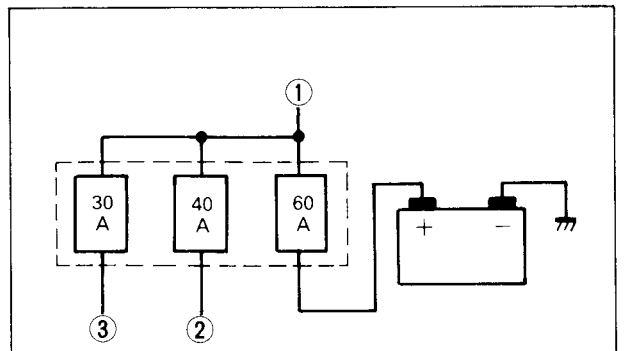

Fig. 8-1 Main Fuse Block Circuit

JUNCTION/FUSE BLOCK CIRCUIT AND FUSE BLOCK DESIGNATIONS

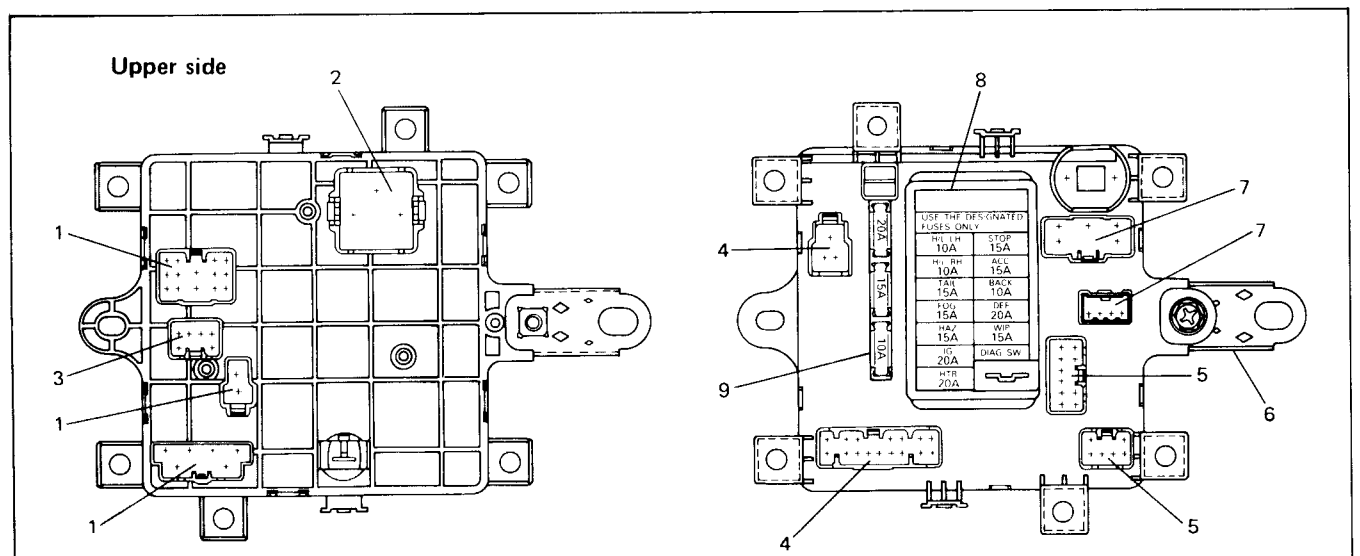

1. To main wiring harness No. 1
2. Turn signal relay
3. To floor wiring harness No. 3
4. To instrument panel wiring harness No. 2
5. To turn signal/dimmer switch
6. Grounding bracket
7. To main switch
8. Fuse block
9. Spare fuses

Fig. 8-2

JUNCTION/FUSE BLOCK CIRCUIT AND COLOR CODES

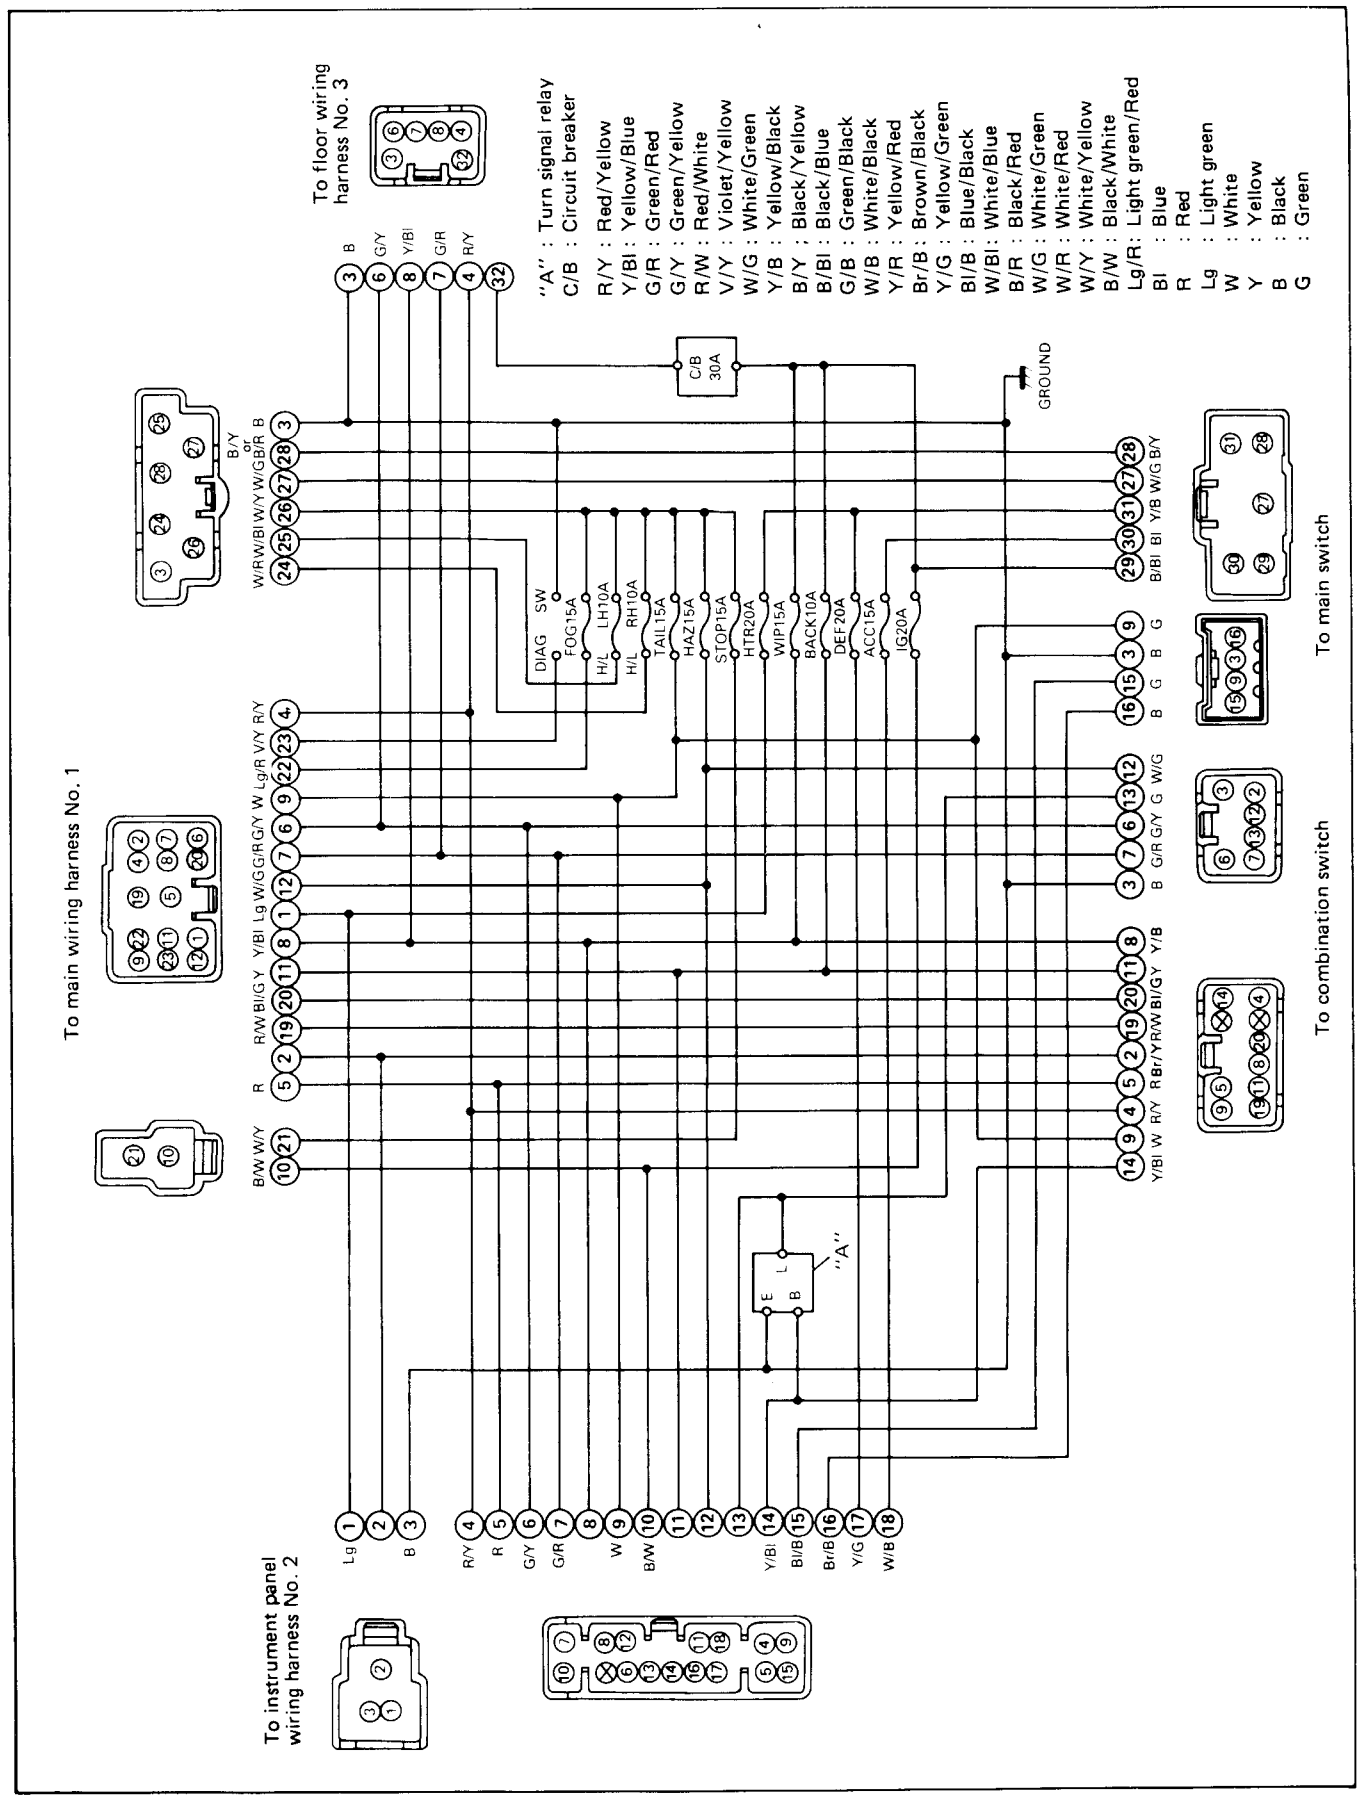

Fig. 8-3